

## Aeromatic Calendar Watch A1091 and A1032



### Instructions for Setting the Aeromatic Calendar Watches

The crown, at the 3:00 position, is for winding and setting the time. If you turn it clockwise, you will feel it wind. Turn it 20 to 30 times to wind it. As long as you wear it daily, you will not have to wind it again. Once fully wound, it will run about 40 hours. If you don't wear the watch for a few days, just wind it 20 times or so to get it going again.

To set the time, pull the crown 'out'. Rotate it clockwise and watch what happens when the time passes '12'. Do the day and date move? If so, then you are now in 'am'. If not, you are in pm. The day/night indicator above 6:00 will show a sun for am and a moon for pm.

Once the time is set, push the crown back in. Use the two pushers to set the month and day. Use the hidden button on the left side of the case (a pen works great) to set the date. That's it. Every month you will need to push the month pusher. And for months less than 31 days, you'll have to adjust the date.

## Aeromatic Calendar Watch A1392 and A1393

